



**Just connect the printer to the torque tester or control unit and that's it!**

**PRNTR1 will immediately print the results of the screwing operation**

**Prints the same results you would get on the PC**

**Works either with standard paper rolls or adhesive rolls**

# Supplied standard with:



+



+



**For EDU2AE/TOP,  
EDU2AE/TOP/TA  
and EDU2AE/HPro  
(from sw v. 1.3)**

**For K and MINI K../S torque  
testers and EDU2AE/HPro  
(up to sw v. 1.2)**